

Bahama Shutter Install
Manual

Parts



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT


THIS DOCUMENT IS THE PROPERTY OF SHARCS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCS CORPORATION.

INSTALLATION
DRAWING


A₁

Step One

Bahama Hinge Installation

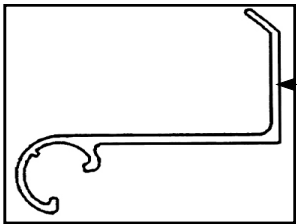

• HOLE WILL BE DRILLED
ON THIS SIDE



1 Front View
Scale: 1/2" : 1'

Note:

3/8" Thread cutting screws and 1/4" Tek Screws have been provided for the wall connection.
You can choose depending on the material thickness you are connecting to.
The hole size that you will drill in the hinge will change according to the screw type you will pick. .

1.1 Drilling Holes



1.2 Installation



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT

THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.

INSTALLATION
DRAWING

A₂

Step Two

Bahama Shutter Installation

2.1 Slide the shutter into place



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT


THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.

INSTALLATION
DRAWING

A₃

Step Three

Bracket Install

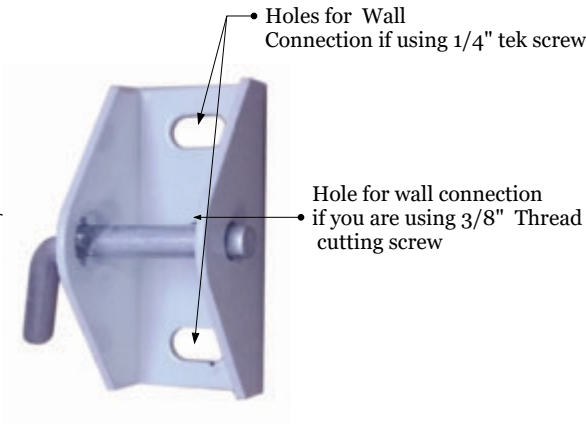

3.1 Hold the two brackets between the wall and with Shutter and mark the wall and the shutter



3.2 With a pencil mark the outer edge. Do it on both sides of the Panel.



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT

THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.


INSTALLATION
DRAWING

Step Four
Shutter Bracket Install

4.1



4.2

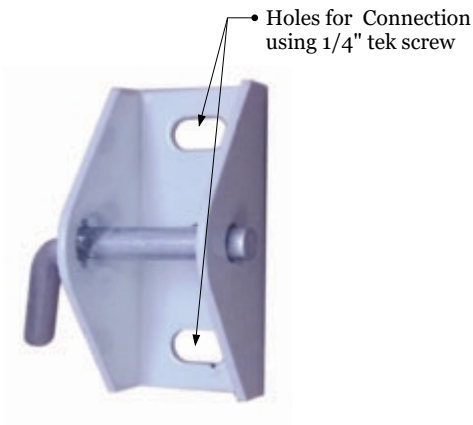

4.3



**Remove the shutter from the window and align the bracket.
Approximately 3" from the bottom of the shutter panel.
DO NOT drill a hole more than 1" deep**

4.4



• ONLY use 1/4" Tek seld drilling Screw
DO NOT use 3/8" thread cutting screws



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT

THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.

INSTALLATION
DRAWING

A₅


Step Five

Wall Bracket Install

5.1 Slide the panel back in the place.



5.2 Mark the screw location

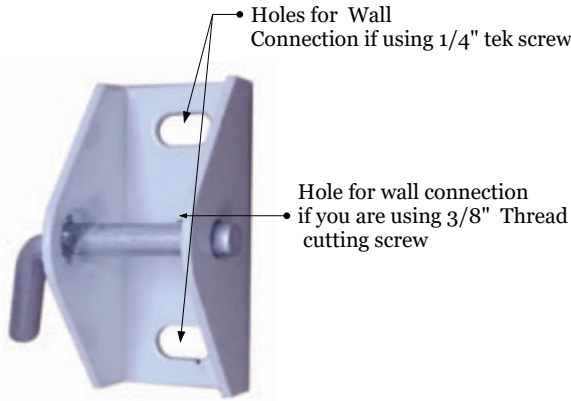

5.3 Drill the holes (The hole size will be according to the wall anchor you are choosing.)



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT

THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.

INSTALLATION
DRAWING

A₆

Step Six

Telescoping Arm Install

6.1 Measure the distance for the telescoping arm.



6.2 Tighten the tension screws to lock the angle.



6.3 To prevent the shutter from sliding out, crimp the ends of the top hinge channel with pliers



CLIENT

PROJECT

PROJECT NO.

DRAWN BY
Sharchs

ISSUE

ARCHITECT

THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.

INSTALLATION
DRAWING

A₇