


Hammerhead Canopy with C-Fascia Installation Manual

Parts

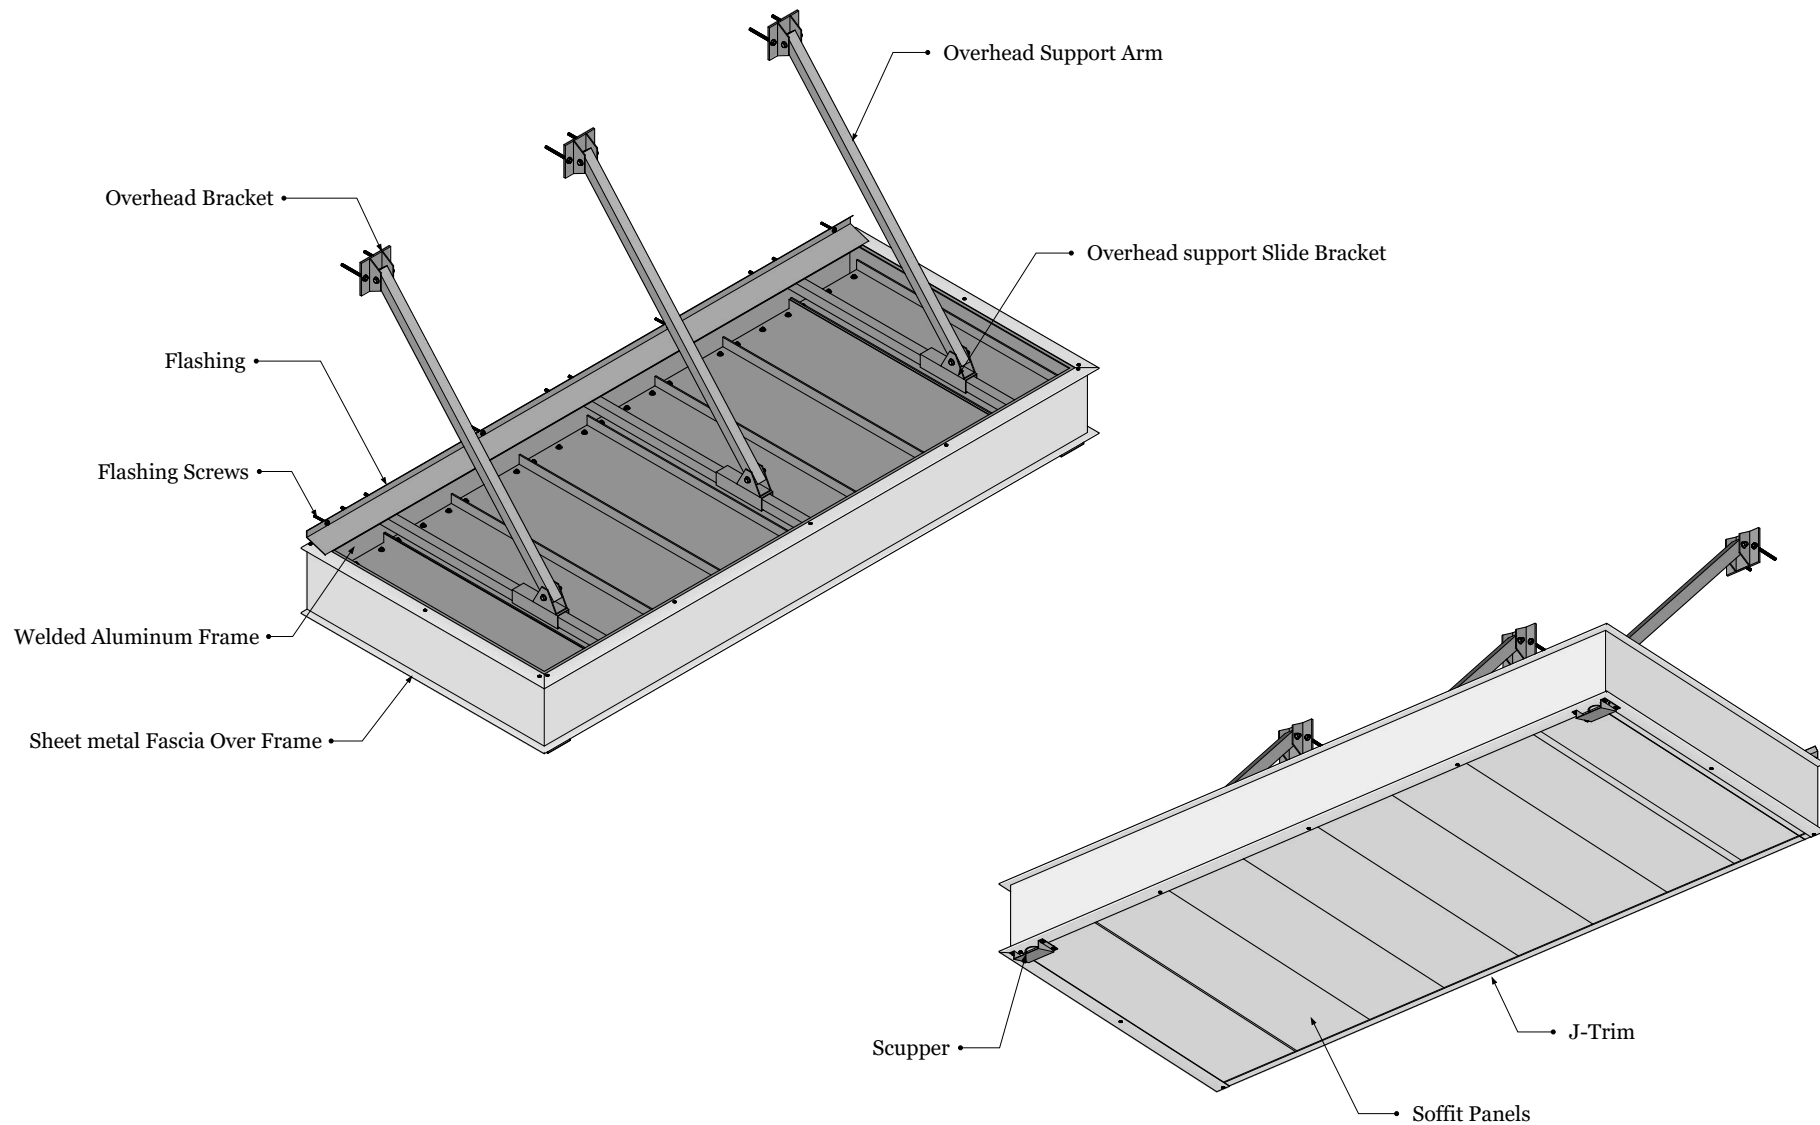

PRODUCT
Hammerhead Canopy from Sharchs

DRAWN BY
Sharchs

ISSUE
07/07/2026

THIS DOCUMENT IS THE PROPERTY OF SHARCS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCS CORPORATION.

INSTALLATION
DRAWING




A₁

Step One

Frame Installation

Note:

Anchors have been provided for the wall connection.
Look was the anchor in the shipment

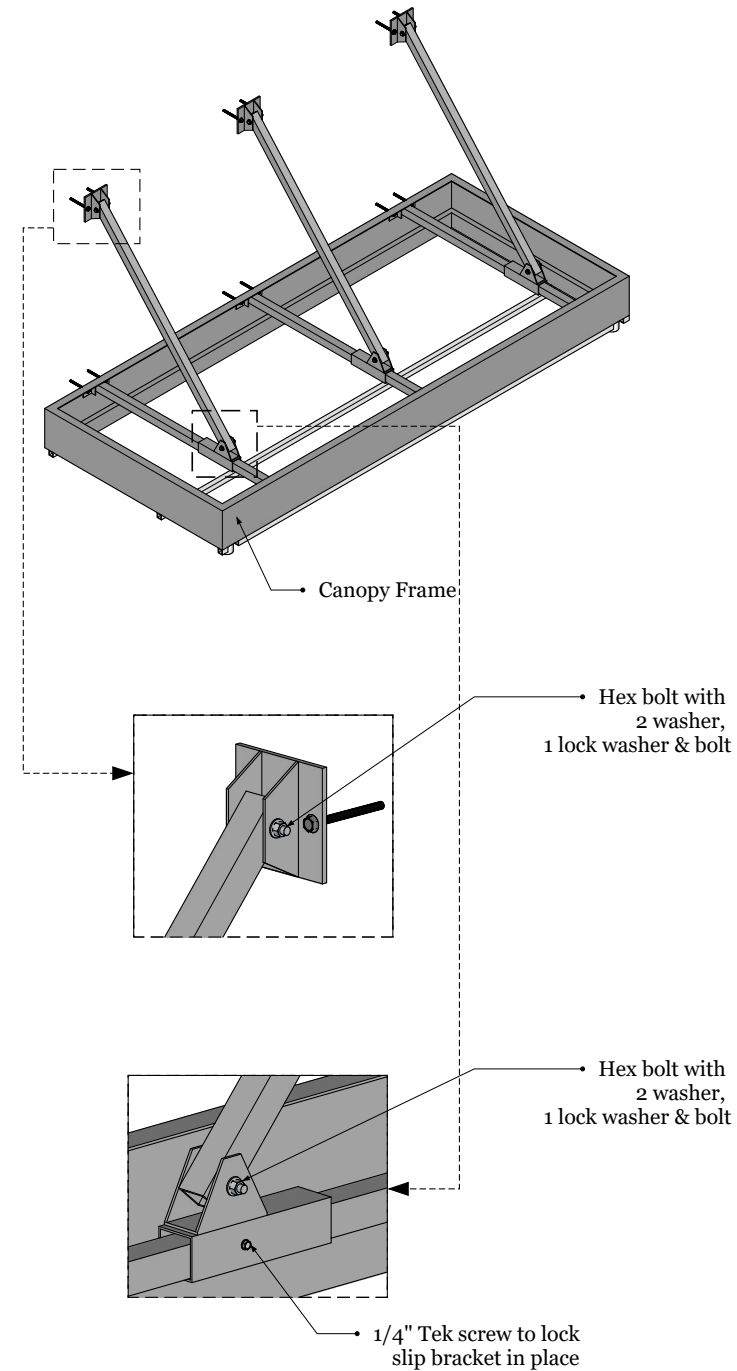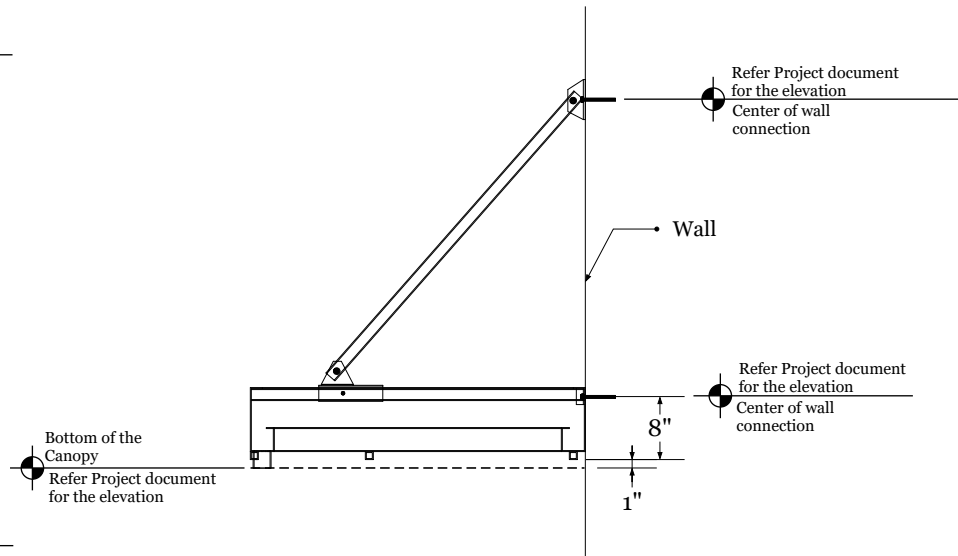
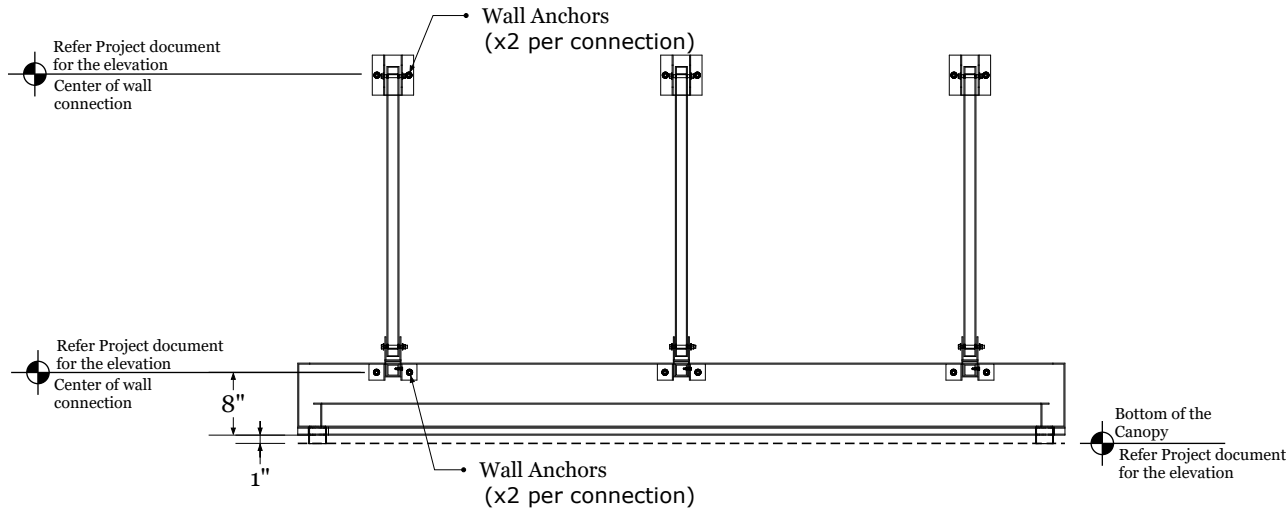


THIS DOCUMENT IS THE PROPERTY OF SHARCHS CORPORATION. IT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS NOT TO BE DISCLOSED TO THIRD PARTIES OR BE USED WITHOUT WRITTEN APPROVAL FROM SHARCHS CORPORATION.




INSTALLATION
DRAWING

A₂


Step Two
Flashing Installation

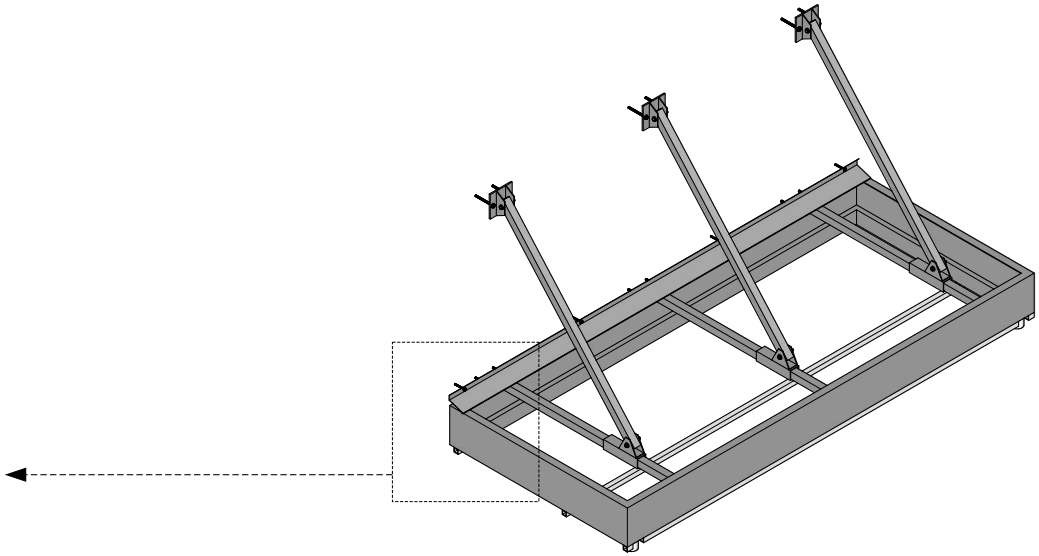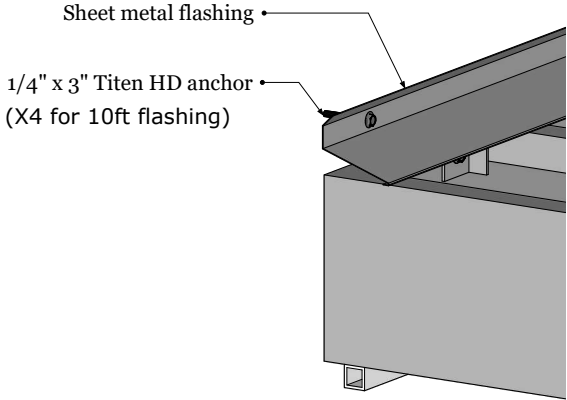

Step Three
Deck pans

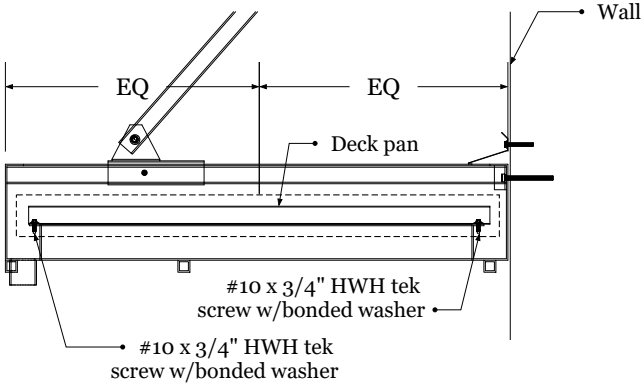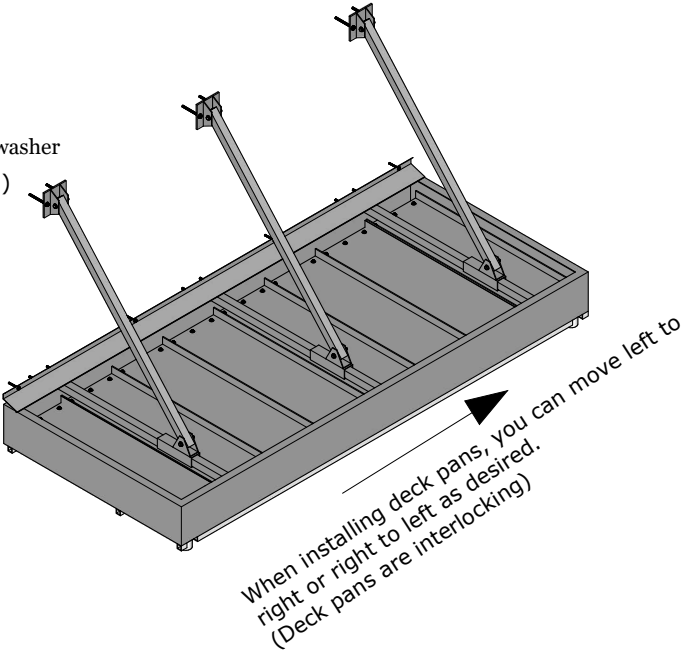
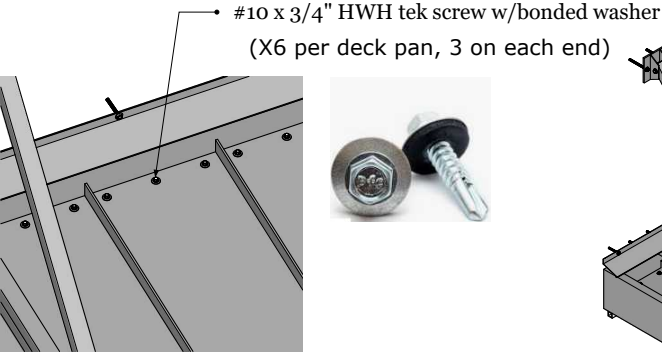


Step Four
J-Trim Installation

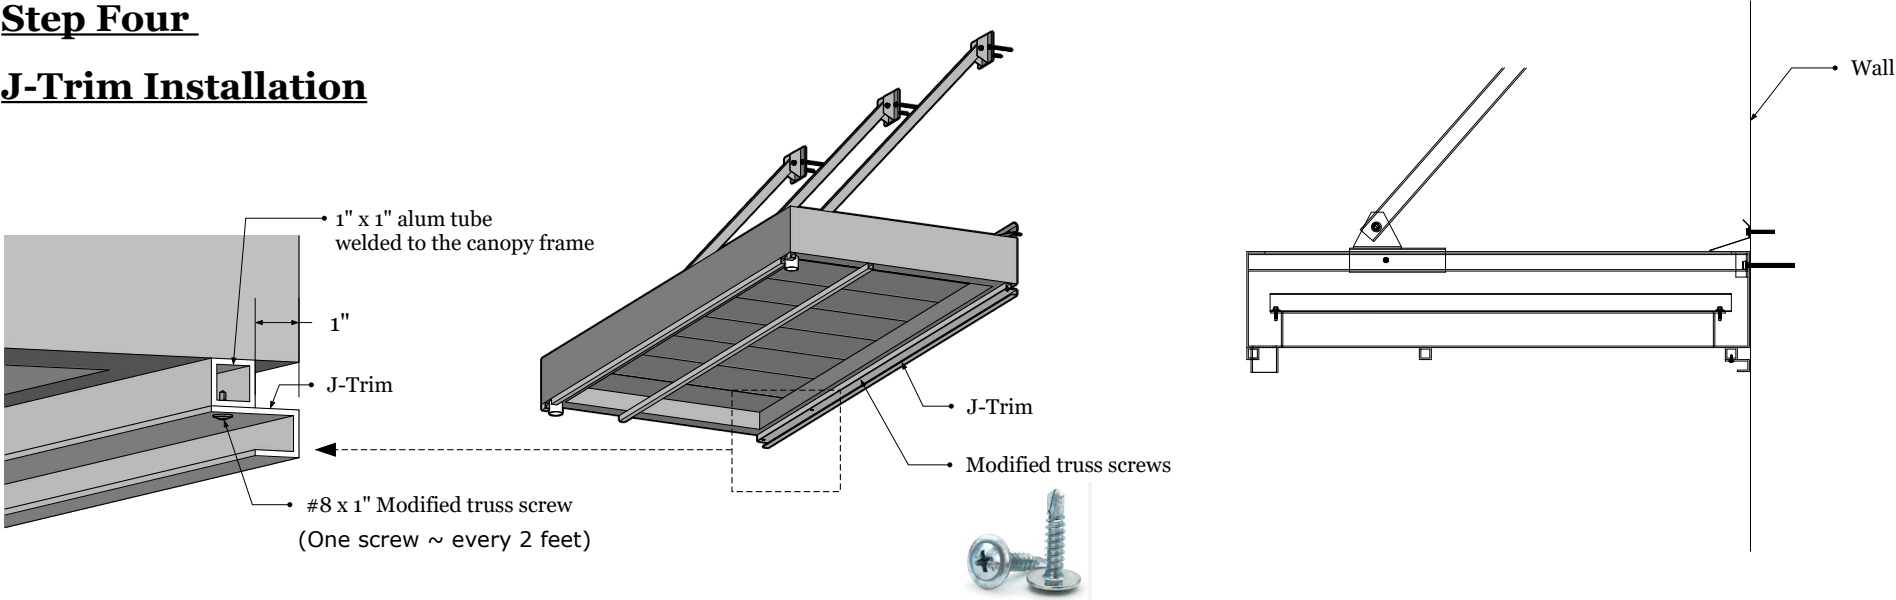

Step Five


Soffit Installation

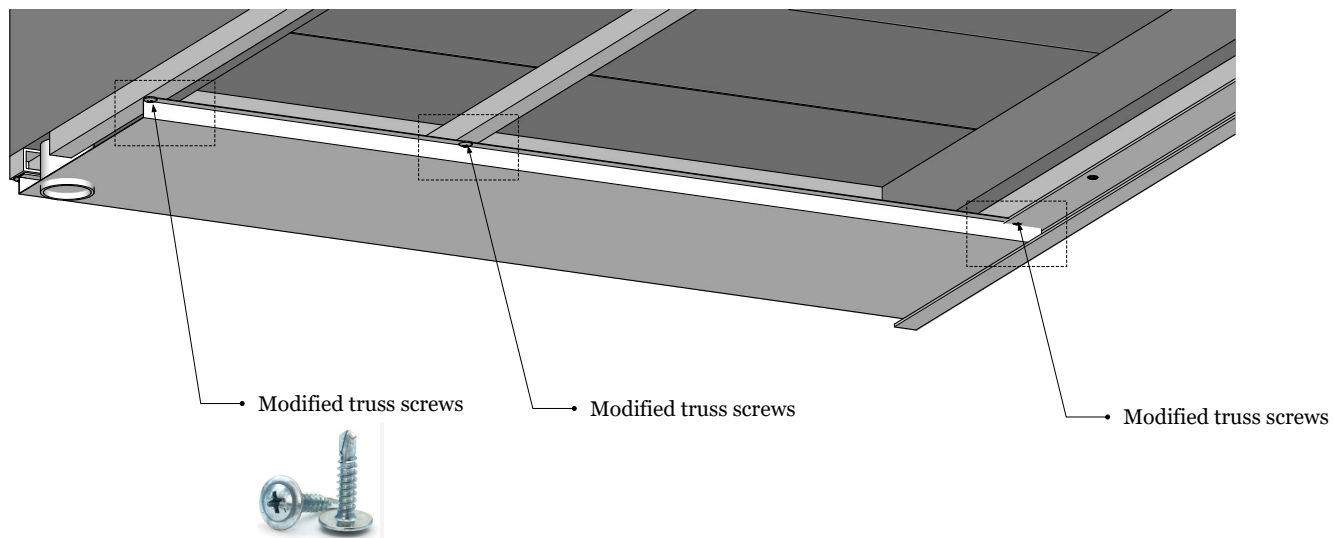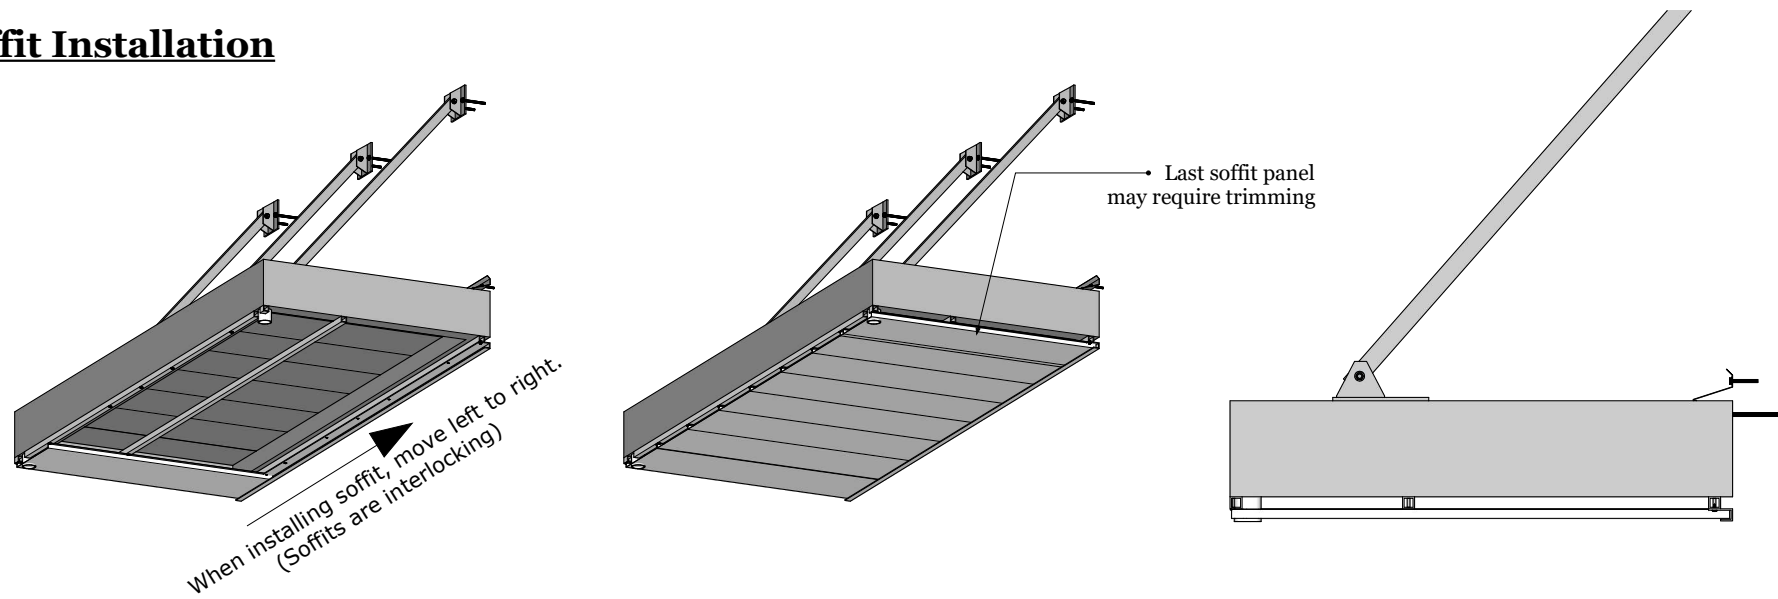



Step Six

Fascia Installation



**NOTE: WHEN CUTTING FASCIA PIECES
MATCH THE LENGTH OF THE FLAT SURFACE**

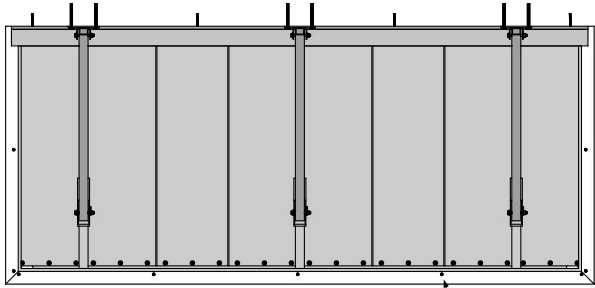

Top View

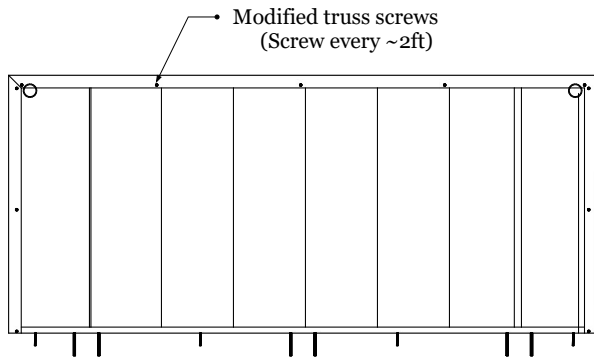
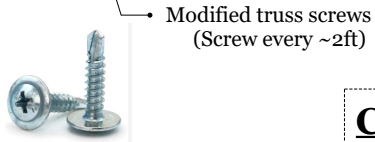


Bottom View

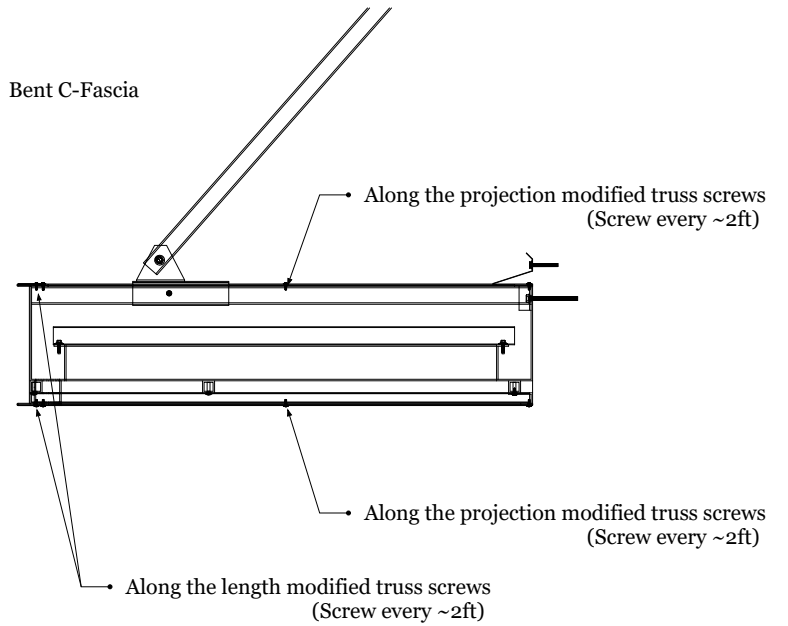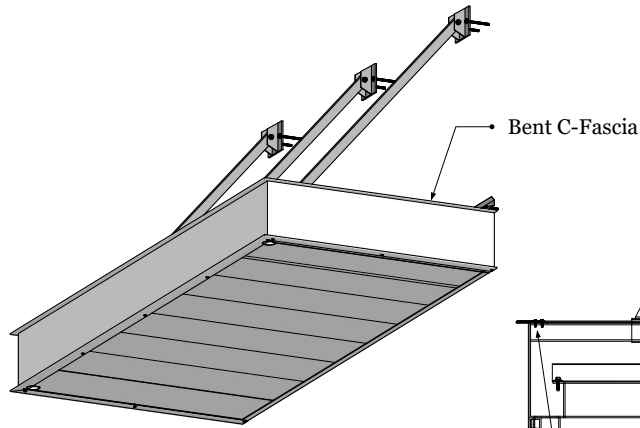


CUTTING FASCIA

**Left & Right
Fascia piece**

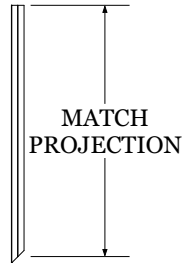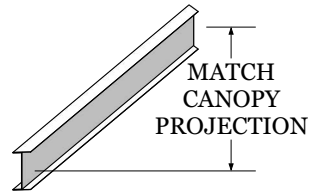

**NOTE: WHEN CUTTING FASCIA PIECES
MATCH THE LENGTH OF THE FLAT SURFACE**

**Front
Fascia piece**

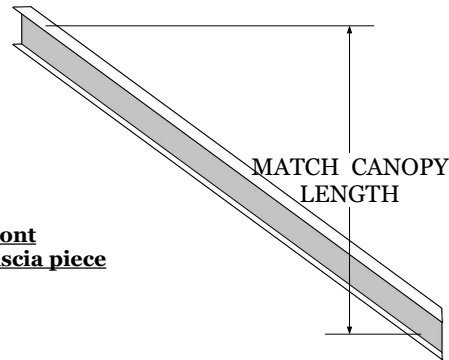


Step Seven

Scupper Installation

Canopies have a welded round pipe at the scupper location



Screw used -
modified Truss

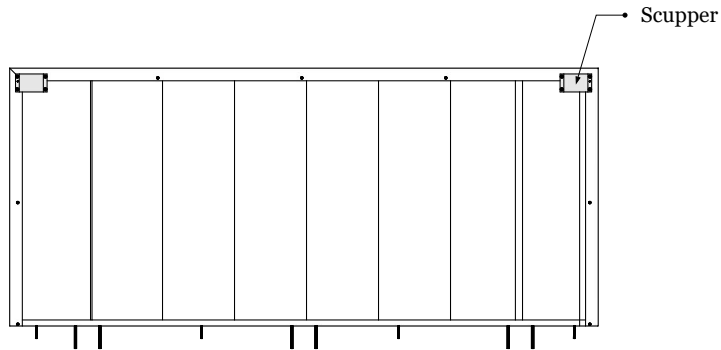

Bottom View

